



Double Electric Underblanket



User Manual

Model number: GSEB2

Please read these instructions carefully and keep for future reference

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electrical shock, and / or injury to persons, basic safety precautions should always be followed, including the following:

- Tie this blanket securely to the bed.
- Use this blanket as an underblanket only. Not recommended for futons or similar folding bedding systems.
- This blanket is not recommended to be used with an adjustable bed. If used on an adjustable bed, check that the blanket or cord can not become caught or rucked.
- Make sure that the heating area (wire element) on any side of the bed does not hang over the edge of the mattress and that the following instructions are read carefully before using the blanket.
- Do not use this blanket for infants, persons with no/limited mobility or heat sensitivity conditions.
- Do not use with wired area tucked in.
- Do not tuck in.
- Do not insert pins.
- Use only for human use, not for pets
- Children should be supervised to make sure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Over long periods of use at the high setting can result in skin irritation or burns.
- Do not use if moist or wet.
- Do not use rucked or folded.
- Keep control unit away from an open window.
- Be sure that this blanket is used only on an alternating current supply circuit of the correct voltage.
- The flexible power supply and switch must, as far as practicable, be kept outside the bed.
- Do not switch the power on if the blanket is wet or in a folded state.
- Switch off at the power outlet and remove the plug when this blanket is not in actual use.
- This blanket must be kept in the fully spread condition at all times during use to avoid overheating. It is imperative that the blanket is frequently inspected to ensure that this condition is being maintained.
- Bed clothes should not be folded back when the blanket is switch on. Do not leave heavy objects on the bed when the unit is switched on.
- Arrange the blanket so that it is not beneath pillows and / or bolsters.
- Do not dry-clean this blanket. Cleaning liquids may have a deleterious effect on the insulation or covering of the heating unit. It is recommended you follow instructions for localized soiling or hand washing if soiling occurs.
- Persons suffering from bed-wetting should only use product specifically designed for this condition.
- If any abnormality or defect in operation of this blanket is observed, discontinue its use immediately and consult the manufacturer or a licensed electrician.
- Regularly inspect the supply cord, plug, controller and blanket for any damage. If found damaged in any way, immediately cease use of the blanket and return to store or authorized service agent for inspection.
- There are no customer serviceable parts inside, Have the blanket serviced by a qualified service agent should the unit require access to internal components.

- The blanket must not be used over or under a waterbed.
- It is recommended that a qualified and registered person inspect your electric blanket after each 3 years of use.
- When storing, fold neatly but not tightly (or roll) in the original packaging without sharp bends in the heating element and store where no other objects will be placed upon it.
- Avoid pressing creases into the appliance.
- This appliance is for domestic use only .Not intended for use in hospitals.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit. See your electrician for professional advice.
- Clean this blanket only as per instruction supplied with this blanket.
- The maximum noise level is less than 70dB according to EN ISO 7779.
- The appliance is only to be used with the type of control unit marked on the appliance.
- When storing the appliance allow it to cool down before folding.
- When storing, fold neatly but not tightly (or roll) in the original packaging without sharp bends in the heating element and store where no other objects will be placed upon it.
- Avoid creasing the appliance by placing items on top of it during storage.

Securing Your Blanket

Important - Tie this blanket securely to the bed.

- Place the blanket on the mattress, leaving room for the pillow and with the mains lead at the pillow end.
- Remove tags from tie tapes.
- Pass the middle tie tape under the middle of the mattress and through the middle loop on the opposite side. Tie tightly (fig 1)
- Pass end tape under the corresponding bottom corner of the mattress and through the end loop, down under the other bottom corner of the mattress and through the bottom side loop (fig 2). Tie tape firmly.
- Repeat procedure for the tape at the top end.
- The blanket should now be firmly taped to mattress as shown in fig 3.

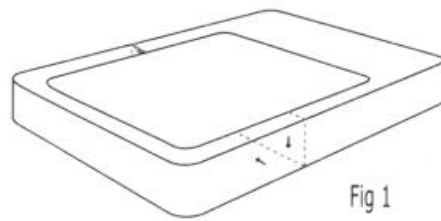
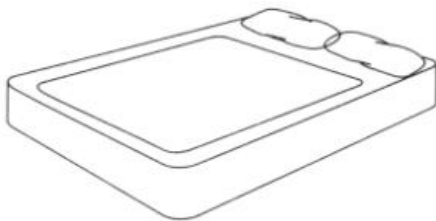


Fig 1

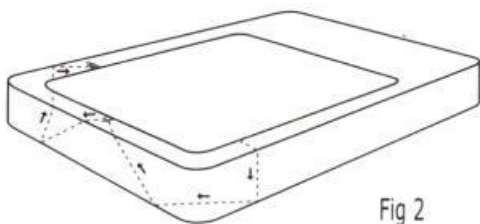


Fig 2

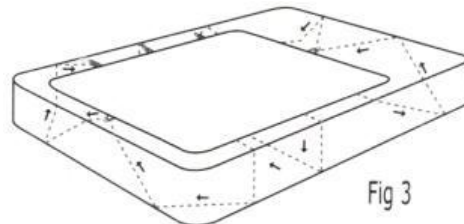


Fig 3

Operation & Controls

The control has Braille markings, which allows for easy temperature adjustment in the dark.

The settings are:

- 0 OFF
- 1 ● Gentle Heat
- 2 ●● Medium Heat
- 3 ●●● Pre-heat - this setting is recommended for Pre-heating the bed 1 to 2 hours before use with standard bedding. **DO NOT SLEEP WITH YOUR BLANKET ON THIS SETTING.**

There is an enclosed red light which illuminates when the blanket is switched on.


NOTE: On initial use it is recommended that the blanket be set on setting '3' for 2 hour before sleeping on the bed and then set to setting '1' for continuous use. Preset on '3' will assist in drying out any moisture which has been accumulated in the mattress.

You may notice an odour when using the blanket for the first time, due to the insulation material. This is harmless and will subside quickly.

Care & Maintenance

Before cleaning, ensure the control is set to the '0' Position (OFF) and remove the plug from the wall socket. **DO NOT ALLOW THE CONTROLLER TO COME IN CONTACT WITH ANY WET SOLUTION.**

Lift the tab on the controller attached to the plastic connector on the blanket, carefully pull the plug connector away from the blanket. The controller **MUST** never be immersed in water.

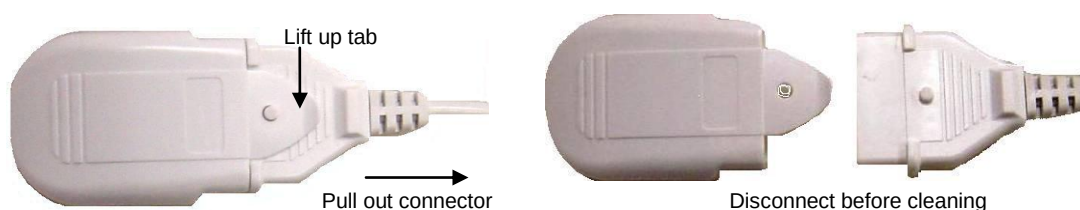

The heating wires within the electric blanket are fully water-proof.

Roll up each of the tie tapes before cleaning or storing and secure them to avoid tangling.

Use only the following instructions:

Hand wash or spot clean
Do not machine wash above 40°C
Do not tumble dry
Do not wring
Do not bleach
Do not dry clean
Do not iron
Do not immerse the controller, supply cord or plug in any liquid.

Spot Cleaning

Sponge the affected area using a luke warm neutral detergent or mild soapy solution. Follow this with a sponging using a clean water solution. Remove any excess water by compressing the wet area between absorbent towels.

Machine Washing

Immerse the blanket only (DO NOT ALLOW THE CONTROLLER TO COME IN CONTACT WITH ANY WET SOLUTION) in luke warm neutral detergent or mild soapy solution for 15 minutes, ensure the water temperature is lower than 40°C. Then wash in the washing machine for 2 minutes at low temperature on a low spin washing cycle.

Rinse the blanket thoroughly in clean fresh water.

Unfolded the blanket and allow to dry naturally.

Hand Washing



Immerse the blanket only (DO NOT ALLOW THE CONTROLLER TO COME IN CONTACT WITH ANY WET SOLUTION) in a luke warm neutral detergent or mild soapy solution. Soak for five minutes, remove from the solution, and gently squeeze the solution through the blanket. Rinse the blanket only (DO NOT ALLOW THE CONTROLLER TO COME IN CONTACT WITH ANY WET SOLUTION) thoroughly in clean luke warm water, gently squeeze and drain the excess water from the blanket. DO NOT WRING THE BLANKET.

Drying

Drape the blanket across a clothes line and drip dry.

DO NOT use pegs to secure the blanket in position.

DO NOT dry with a hair dryer or heater.

IMPORTANT: Ensure the controls are in a position that will not allow dripping water to fall onto any part of the controller.

Storage

When not in use, pack the blanket in its original packaging for best protection and store in a cool, clean and dry location. Avoid pressing sharp creases into the blanket.

Specifications

Product number: 2160260

Rated voltage: 230V ~ 50HZ

Power consumption: 90W

Dimensions: L150cm x W 140cm approx

Please keep these instructions for future reference

**For spare parts
please call
0845 209 7461
Opening times:
Monday - Friday
9am until 5pm**



Revision 1



This symbol is known as the 'Crossed-out wheeled bin Symbol'. When this symbol is marked on products, it means that the products should not be disposed of with your general household waste. Only discard electrical & electronic items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to make sure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

We reserve the right due to possible changes to design to alter the instruction manual without prior notice.